

Compressor, air-mate - Emglo/Jenny Products, AM78-HC4V

Safety Information

ELECTRIC AIR COMPRESSOR SAFETY

(NOTE: After reading this article, you may want to take a test on its content. To do so, follow this link: [Electric Air Compressor Test](#))

IMPORTANT! Read and Follow All Instructions before Operating the Machine

Operating Instructions for Direct Drive, Non Code, Carry Type Air Compressors

1. **LOCATION:** Select a clean, cool, dry, well ventilated location.
2. **FOLLOW** all local and national electrical codes. Compressor must be properly grounded. Connect only to 60 cycle 1 phase 120 volt power supply.
CAUTION: Always disconnect the electric power and remove all air from the air receiver before servicing the air compressor.
3. **COMPRESSOR LUBRICATION:** Before operating your compressor, replenish oil; oil level should be checked daily. Use non-detergent SAE 30 Oil. Change oil every 100 hours or sooner if it becomes dirty.
CAUTION: Most air compressor failure is caused by improper lubrication.

Important Safety Information!

1. **PRESSURE CONTROL:** Your air compressor is equipped with automatic start/stop pressure control switch, which is factory-set. **DO NOT** exceed maximum factory setting.
2. **ALWAYS** disconnect the electric power and remove all air from the air receiver before servicing the air compressor.
3. **FOLLOW** all local and national codes. Compressor must be properly grounded.
4. **BE CAREFUL** when touching any part of the compressor after it has been running; compressor, electric motor and discharge lines may be hot enough to cause injury.